



FO800R

User's Manual

Manual Contents

Manual Contents	1-0
Welcome!, Product Description	1-1
System Requirements for Setup	1-2
Installation	1-3
Troubleshooting, Maintenance, Technical Support	1-5
Product Specifications	1-6
Warranty Information	1-7
Regulatory Statements	1-8

Pictorials

Figure 1 – IEEE1394 repeater system with optional fiber cables	1-1
Figure 2 – End View of FO800R Repeater	1-3
Figure 3 – Side View of RO800R Repeater	1-4

Welcome!

Congratulations on your purchase of the **NET GmbH FO800R** Optical IEEE1394 Repeater System. This manual contains information that will assist you in installing and operating the product.

Product Description

Shipping Group

- **FO800R Optical IEEE1394 Repeater:** Two (2) units
- **0.7 meter 1394b copper cables :** Two (2) units
2pcs x Bilingual port(9pin) to DS port(6pin) for S400 **or**
2pcs x Bilingual port(9pin) to Bilingual port(9pin) for S800
- **AC/DC power adapter:** One (1) unit
- **User's Manual**
- **Duplex LC Multi-Mode Optical Fiber Cable:** Optional, can be provided by the user or by the reseller.

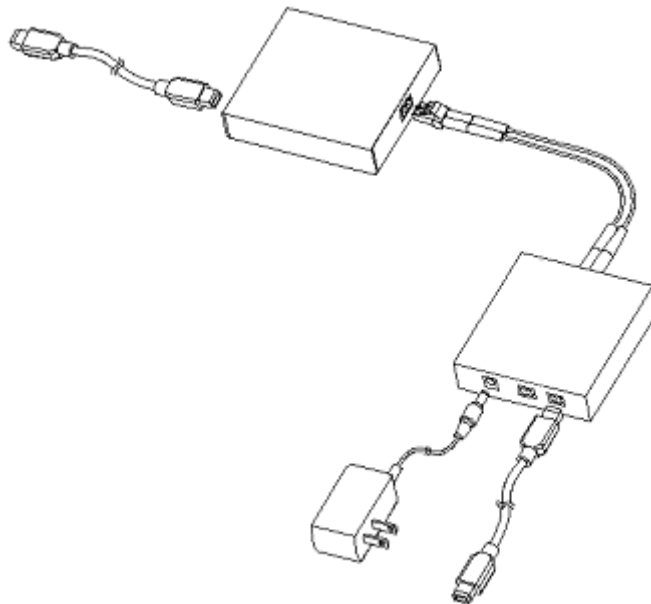


Figure 1 – IEEE1394 repeater system with optional fiber cables

1-1 Welcome, Product Description

System Requirements for Setup

□ **Hardware requirements**

- You have to have a 1394(a/b) controller having a DS / bilingual port in your PC or Mac systems.
- No special requirements memory size, CPU speed and chipsets, if you've already properly installed your 1394 controllers.

□ **Software requirements**

- No special restrictions, if you've already properly installed your 1394 controller in your OS.
- **Precaution:** Before using NET GmbH FO800R, you have to confirm to install proper device drivers, which the device manufacture supplies, designed for your operating system. If not, NET GmbH FO800R might not work.

□ **AC/DC Power Adapter Technical Advisory**

When IEEE 1394 devices or controllers are self-powered, the Power LED is illuminated and the shipping group's external DC power adapter is not required. Use only if the Power LED is off when the entire system is powered up. The power adaptor in the shipping group can supply to 1394 device up to 12V 1A (12W) through IM4.

Note: This installation advisory is highlighted to avoid power conflicts between self-powered devices and controllers, and unnecessarily applied external power.

Installation

Important: Please use the installation procedure below. Improper, or no operation may result if the start-up sequence is not correctly followed.

Step 1

Carefully unpack the contents of the shipping group.

Step 2

Ensure **no** host or peripheral equipment is powered up.

Step 3

The FO800R IEEE1394 repeater boxes are identical. Identify one as upstream (or host) and downstream (or peripheral).

Step 4

Prepare a duplex LC patch cord fiber-optic cable (Multi-Mode Glass Optical Fiber with 62.5/125 μm or 50.0/125 μm core). Attach the two LC connector fiber cables **first** with no power applied to any system component as follows:

Tx (Upstream) to **Rx** (Downstream)

Rx (Upstream) to **Tx** (Downstream)

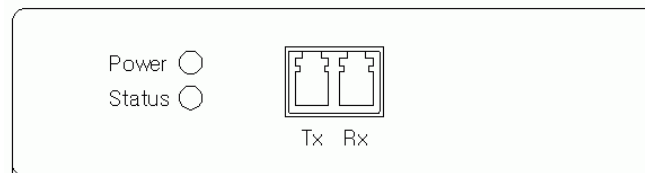


Figure 2 – End View of FO800R Repeater

Step 5

Connect the upstream box to the host computer using a copper IEEE1394 cable by plugging into the host computer IEEE1394 card and the upstream box IEEE1394 port (either one)

Step 6

Connect the downstream box to the peripheral equipment in a similar manner.

Step 7

If there are non-NET GmbH external power supplies to be attached, do so now. e.g. block power supplies for laptop IEEE1394 PC cards, downstream appliances, etc. Do **NOT** attach the FO800R power supplies until instructed to do so.

1-3 Installation

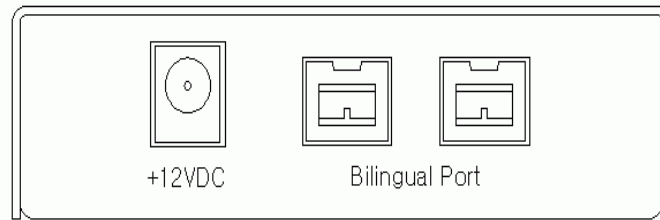


Figure 3 – Side View of FO800R Repeater

Step 8

Power up the host and peripheral equipment. At this point, there must be **no external power supplies** plugged into the FO800R upstream or downstream boxes,

Step 9

Observe the Power Light Emitting Diode on the side of the boxes.

If the upstream box LED is illuminated, **no external power supply is required.** Likewise if the downstream box LED is illuminated, **no external power supply is required.**

Step 10

If both Power LEDs are illuminated, then the IEEE1394 link is active. Proceed with the software bring-up on the host system. Ignore further steps.

Step 11

If one or both of the upstream/downstream Power LEDs are dark, then power down all equipment and plug in one or two NET GmbH power supplies.

Step 12

Power up complete system. Both upstream/downstream LEDs should be illuminated. Proceed with host software bring-up.

Do NOT plug in external power to the box if the PWR LED is on after the FO800R repeater is connected to a live host or powered peripheral

Troubleshooting

The Power LEDs are not illuminated.

Ensure that all AC and DC plugs and jacks used by external power supplies (both NET GmbH and others) are firmly connected. Ensure that power bars are live.

No controller or driver for the peripheral device exists in the Operating System (OS) device manager.

Reset the system. Disconnect and reconnect 1394(b) copper cables or DC power adapters.

Check if the two fibers are properly connected. The Tx in one repeater goes to the Rx in the other and vice-versa.

Remove the fiber cables and use a IEEE1394 copper cable to connect the upstream and downstream boxes by plugging in to the unused bilingual ports.

The OS device manager shows the IEEE1394 connection, but the IEEE1394 peripheral does not work properly.

Ensure that the correct software device driver is loaded on the processor platform.

Direct connect the peripheral to the processor's IEEE1394 port to confirm operation.

Software drivers are usually available from the Internet.

Maintenance

No special maintenance is required for the optical repeater boxes and power supplies. If not in use, insert the factory provided plug into the Tx/Rx fiber port. Ensure that the repeaters and power modules are stored or used in a benign environment free from liquid or dirt contamination.

There are no user serviceable parts. Refer all service and repair issues to NET GmbH.

Technical Support and Service

For commercial or general product support, contact your reseller. For technical service, contact us by email info@net-gmbh.com or info@net-usa-inc.com. Or visit our website at www.net-gmbh.com or www.net-usa-inc.com

Product Specifications

FO800R Optical IEEE1394 Repeater

- **Electrical Specifications**
 - Fully supports provisions of IEEE1394b-2002 (2 bilingual ports)
 - Power supply: DC12~16V (max.500mA)
 - Data rates: S100 (98.304 Mbps), S200 (196.608 Mbps), S400 (393.216 Mbps) and S800 (983.04 Mbps)

- **Optical Specifications**
 - IEEE1394b-2002 compliant
 - Duplex LC type optical port supporting 62.5 μ m, 50.0 μ m, Multi-mode Glass of Fiber
 - Laser Class 1 Eye Safety compliant: 850nm VCSEL
 - Data rates: S100 (122.44 Mbps), S200 (245.76 Mbps), S400 (491.52 Mbps), S800 (983.04 Mbps)

- **Mechanical Specifications**
 - Box dimensions: 101mm / 24mm / 91mm (W/H/D)
 - Weight: 0.252 Kg

- **Environmental Specifications**
 - Operating temperature: 0°C to 70°C
 - Storage temperature: - 40°C to 85°C
 - Humidity: 5% to 95%

AC/DC Power Adapter

- **Power Input:** AC 100-240V, 50/60Hz 0.1A
- **Power Output:** +12 V, 1.0A SMPS DC-power Adapter
- **Cord DC Jack:** Core is 12 V and outer is GND.

1-6 Product Specifications

Warranty Information

1 (One) Year Warranty

NET GmbH warrants this optical IEEE1394 repeater to be free from defects in workmanship and materials, under normal use and service, for a period of one (1) year from the date of purchase from NET GmbH or its authorized resellers.

If a product does not work as warranted during the applicable warranty period, NET GmbH shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item.

All products that are replaced will become the property of NET GmbH.

Replacement products may be new or reconditioned.

Any replaced or repaired product or part has a ninety (90) day warranty or the remainder of the initial warranty period, whichever is longer.

NET GmbH shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to NET GmbH for repair under warranty or not.

Warranty Limitation and Exclusion

NET GmbH shall have no further obligation under the foregoing limited warranty if the product has been damaged due to abuse, misuse, neglect, accident, unusual physical or electrical stress, unauthorized modifications, tampering, alterations, or service other than by NET GmbH or its authorized agents, causes other than from ordinary use or failure to properly use the Product in the application for which said Product is intended.

1-7 Warranty Information

FCC Statement

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction guide, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult a service representative for help.

Properly shielded and grounded cables and connectors must be used in order to comply with FCC emission limits. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Optical Safety Statement

The FOculus FO800R repeater uses an 850nm Multi-Mode Vertical Cavity Surface Emitting Laser diode transmitter that has been designed to meet Class 1 eye safety.

1-8 Regulatory Statements

© 2004 NET GmbH Co., Ltd. All Rights Reserved
Revision 1 1005

NET GmbH Locations

NET New Electronic Technology
Vertriebsgesellschaft mbH,
Lerchenberg 7. D-86923 Finning
Fon + 49 8806 92 34-0
Fax +49 8806 92 34 -77
info@net-gmbh.com

NET USA, Inc.
3037 – 45th Street
Highland, IN 46322
Fon +1 219 934 90 42
Fax +1 219 934 90 47
info@net-usa-inc.com

For order support, please contact your Distributor or Reseller.

For technical support, check with the NET GmbH web site.

www.net-gmbh.com

www.net-usa-inc.com